




型式 MODEL / MHF 外型尺寸

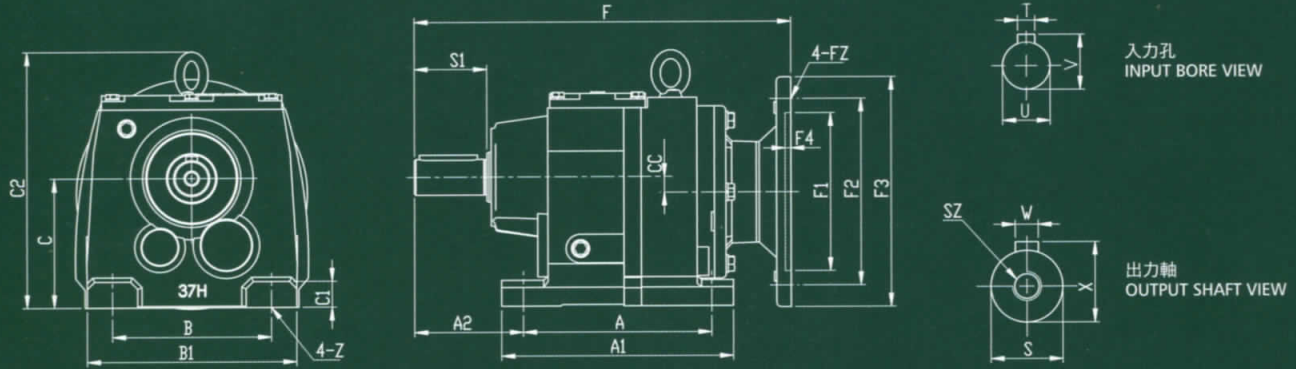

MHF	A	A1	A2	B	B1	C	C1	C2	CC	Z	出力軸 OUTPUT SHAFT					
											S	S1	W	X	SZ	Oil (l)
17	110	131	58	110	135	75	12	135	6.5	9	20k6	40	6	22.5	M6*15L	0.24
37	130	160	75	110	145	90	18	178	11	9	25k6	50	8	28	M10*20L	0.3
47	165	195	90	135	170	115	24	217	13.5	14	30k6	60	8	33	M10*20L	0.7
67	195	235	100	150	210	130	30	249	17	14	35k6	70	10	38	M12*24L	1.1
77	205	245	115	170	230	140	30	266	16	18	40k6	80	12	43	M16*32L	1.2
87	260	310	140	215	290	180	45	335	18	18	50k6	100	14	53.5	M16*32L	2.3
97	310	365	160	250	340	225	55	416	20	22	60m6	120	18	64	M20*40L	4.6
107	370	440	185	290	400	250	65	465	23	26	70m6	140	20	74.5	M20*40L	6
137	410	490	220	340	450	315	70	550	35	33	90m6	170	25	95	M24*48L	10
147	500	590	215	380	530	355	80	634	52	39	110m6	210	28	116	M24*48L	15.4

MHF	入力法蘭 MOUNTING FLANGE										
	HP	1/8 (B14)	1/4 (B14)	1/2 (B14)	1 (B14)						
17	F	212.5		227							
37	HP	1/4	1/2	1	2						
	F	260		278							
47	HP	1/2	1	2	3	5					
	F	287.5	305.5		322						
67	HP	1/2	1	2	3	5					
	F	325.5	343.5		360						
77	HP	1	2	3	5	7.5	10				
	F	361.5	378		426.5						
87	HP	2	3	5	7.5	10	15				
	F	421.5	438	486.5	522.5						
97	HP	5	7.5	10	15	20	25	30	40		
	F	502	546.5	582.5	591.5						
107	HP	7.5	10	15	20	25	30	40	50	60	
	F	592	628	637	668						
137	HP	15	20	25	30	40	50	60	75		
	F	713	721	752	769						
147	HP	15	20	25	30	40	50	60	75	100	125
	F	812.5	820.5	855.5	872.5	910.5					

入力孔 INPUT BORE	入力法蘭 MOUNTING FLANGE								
	HP	U	V	T	F1	F2	F3	F4	FZ
1/8 (B14)	11	13.3	5	60	75	90	3.5	φ6	
1/4 (B14)	14	16.3	5	70	85	105	3.5	φ7	
1/2 (B14)	19	21.8	6	80	100	120	4	φ7	
1 (B14)	11	12.8	4	110	130	160	4	M8	
1/2	14	16.3	5						
1	19	21.8	6	130	165	200	5	M10	
2	24	27.3	8						
3	28	31.3	8	180	215	250	5	M12	
5									
7.5	38	41.3	10	230	265	300	6	M12	
10									
15	42	45.3	12	250	300	350	6	M16	
20									
25	48	51.8	14						
30				300	350	400	6	M16	
40	55	59.3	16						
50	60	64.4	18	350	400	450	6	M16	
60									
75	65	69.4	18	450	500	550	6	M16	
100									
125	75	79.95	20	450	500	550	6	M16	

註: 1. 馬力及型號選定, 請參考P.31.
 2. 減速機重量請參考P.30.
 3. 輸入馬力及輸出扭力矩請參考P.32-P.45.

REMARK: 1 SELECTION TABLE OF HP & SIZE, PLEASE REFER TO P.31 Unit:mm
 2 WEIGHT, PLEASE REFER TO P.30
 3 INPUT HP & OUTPUT TORQUE RATINGS, PLEASE REFER TO P.32-45